



1. REAR COVER
2. FRONT COVER
3. POWER INTENSITY SWITCH
4. POWER ON INDICATION
5. THERMOSTAT
6. HANDLE



## IMPORTANT PROTECTIVE MEASURES

Thank you for purchasing our product. Please read these instructions carefully before using the device. Please keep this manual for future reference.

1. Use the fan on flat surfaces, not tilted or inverted. Do not use directly under the socket.
2. Do not use the fan in the presence of explosive or flammable substances.
3. It is **imperative** to ensure the following:
  - Do not use the socket to which the fan is connected to power another high power electrical appliance at the same time.
  - The correct connection of the plug to the socket to prevent overheating and malfunction.
  - Disconnect the fan by grasping the plug and pulling it out of the socket. Never tug on the cord.
  - Use extra caution if children, the elderly or people with impaired senses are inside the room. Do not use the device unless supervision is provided.
  - **WARNING:** Never cover the fan with anything!

## OPERATING INSTRUCTIONS

1. Plug into a 230 V/50 Hz AC socket.
2. The fan is equipped with a 4-position rotary switch.

SYMBOL	FUNCTIONS
0	OFF
*	VENTILATION WITHOUT HEATING
I	HALF HEAT OUTPUT - 1000W
II	FULL HEAT OUTPUT - 2000W

3. To heat the room quickly, set the rotary switch to maximum. Once the room is at the desired temperature, select a lower setting to reduce power consumption and prevent the room from

- getting too hot.
4. Set the thermostat to maximum and select the desired power setting. Once the room is at an acceptable temperature, turn the thermostat counterclockwise until the heater shuts off. The thermostat will now maintain the temperature by cycling the heater on or off. In particularly cold weather, the low power setting may not be sufficient to satisfy the thermostat's requirements. Select a higher setting for these periods.
  5. Before switching off, it is better to set the fan to the cooling state for 5-10 seconds.

## SAFETY CHECK

To prevent damage and the risk of overheating, the heater is equipped with a protection device that, in the event of overheating, switches off the heater, which prevents the appliance from turning on until the temperature drops to a certain level.

## MAINTENANCE

1. When the fan needs cleaning, wipe the outer surfaces of the fan with a damp cloth. Do not rinse it directly with water. Be sure to unplug the power plug before cleaning.
2. To prolong the life of the device, do not disassemble it. When a malfunction occurs, send the heater to a service center for inspection by trained personnel.

## SPECIFICATIONS

Power supply: 220 – 240 V / 50 Hz

Power control range: 1000/2000 W

Suitable heating area: 15-20 m<sup>2</sup>

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or with insufficient experience and knowledge, unless they have been supervised or instructed in the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
  - If the power cord is damaged, it must be replaced by the manufacturer, its service representative, or similarly qualified persons to prevent improper installation.
  - **WARNING:** To prevent overheating, do not cover the heater.
  - The heater must not be placed immediately below the outlet..
  - Do not use this heater in the immediate vicinity of a bathtub, shower or swimming pool.

